
# Arduino Uno LAMBDA68 Shield

## Features

- LoRa™ Semtech LLCC68
- Up to 20Km Range
- TX +22 dBm
- High Rx sensitivity: down to -148dBm
- Built in RF Switch
- 868/918 MHz Versions
- 100mm PCB antenna
- LoRa, FSK, GFSK, MSK, GMSK, OOK modulation
- Preamble detection
- CE Compliant
- Stackable shield design
- Example Code Available

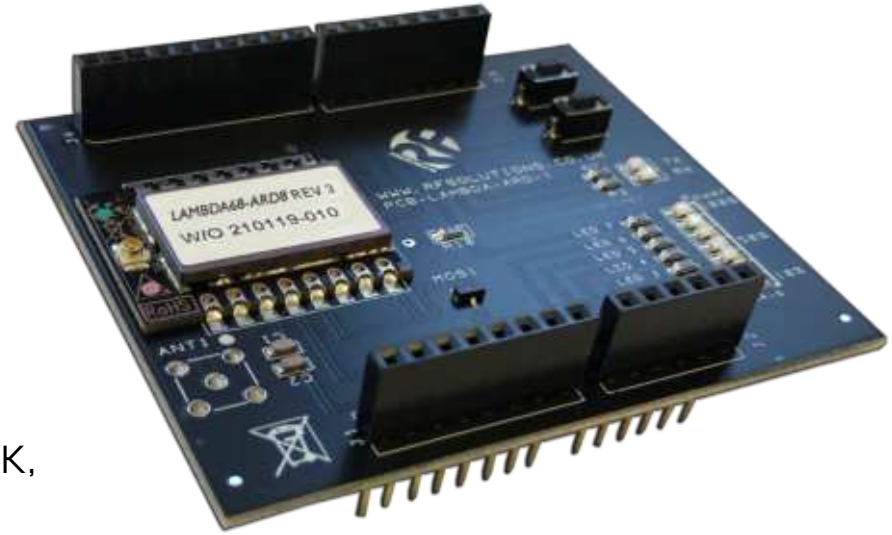


## Description


An Arduino Uno RF shield based on the LAMBDA68 RF Module.
This Shield allows for the easy addition of RF to your Arduino project. This shield allows for long transmission distances, with a wide range of encoding options.
There are 2 onboard user configurable switches and the option of an LED array to display the RF signal strength.

## Ordering Information

| Part Number | Description |
|---|---|
| LAMBDA68-ARD8 | Arduino UNO Development shield, 868MHz |

# LAMBDA68 Arduino Shield

## Overview

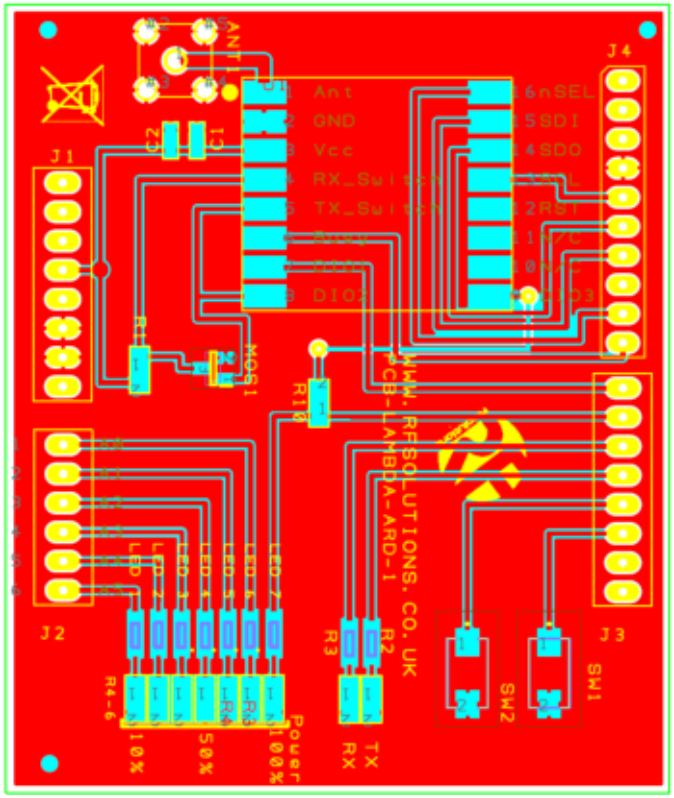


| Arduino Pin | Shield Pin | Connector/Pin |
|---|---|---|
| 0 | N/C | J3-8 |
| 1 | N/C | J3-7 |
| 2 (Input) | SW1 | J3-6 |
| 3 (Input) | SW2 | J3-5 |
| 4 (Output) | LED TX | J3-4 |
| 5 (Output) | LED RX | J3-3 |
| 6 (Output/Input) | LED 7 / DIO3 | J3-2 |
| 7 | DIO1 | J3-1 |
| 8 | Busy | J4-10 |
| 9 | nSEL | J4-9 |
| 10 | N/C | J4-8 |
| 11 | SDI | J4-7 |
| 12 | SDO | J4-6 |
| 13 | SCL | J4-5 |
| A0 (Output) | LED 6 / N/C | J2-1 |
| A1 (Output) | LED 5 / N/C | J2-2 |
| A2 (Output) | LED 4 / N/C | J2-3 |
| A3 (Output) | LED 3 / N/C | J2-4 |
| A4 (Output) | LED 2 / N/C | J2-5 |
| A5 (Output) | LED 1 / N/C | J2-6 |

## Available Resources

- LAMBDA68 Datasheet
- LLCC68 Datasheet

A Build Pack is also available containing;

- Schematic
- Gerber's
- DesignSpark Project
- Example Code

This is available at www.rfsolutions.co.uk/downloads/Arduino.php

## Application Notes

### Transmitter and Receiver Example with two LAMBDA68 Shields

In this example two LAMBDA68 shields were used, one as a transmitter and one a receiver. The frequency used was 868 MHz, but is configurable to 915MHz. The modulation used was FSK, however, they can also operate in LoRa mode. More information about different operating modes can be found in the LLCC68 Datasheet. The LAMBDA68 modules communicate with the Arduino's via SPI. This communication allows for the Arduino to configure the LAMBDA68 module and transfer the data to be transmitted.

### Step 1: Define Inputs and Outputs

The first step is to define each of the pins connected from the Arduino to the LAMBDA68 module. The pin connections can be seen under the table above.

All the SPI pin connections are defined within the SPI.h file which needs to be included. Next the pins need to be set as either Inputs or outputs. For the on-board switches the internal pullup resistor needs to be activated, this is achieved by using:

```
pinMode(SW_1, INPUT_PULLUP);
```

### Step 2: Define LAMBDA configuration settings

In order to define the configuration settings, first the structure of the command needs to be understood. From the statement below it can be seen that the command is stored as an array in byte format. The array can be broken down into two sections, the Opcode and the settings. This Opcode tells the LAMBDA68 module what the information it is about to receive relates to. For a full list of Opcodes and the settings associated with them please refer to the SX1268 datasheet.

```
byte tx_params[] = {0x8E, 0x16, 0x06};
```

Data Type — Array name — Opcode — Tansmitter power — Ramp Time

For both transmitter and receiver the following settings need to be defined:

Standby mode: `byte standby[] = {0x80, 0x01};`

FSK Mode: `byte fsk[] = {0x8A, 0x00};`

Modulation Parameters: `byte modulation[] = {0x8B, 0x01, 0xA0, 0xAA, 0x00, 0x1A, 0x00, 0x7A, 0xE1};`

Packet parameters: `byte packet_params[] = {0x8C, 0x00, 0x20, 0x05, 0x10, 0x00, 0x00, 0x0D, 0x00, 0x00};`

Regulator Parameters: `byte regulator[] = {0x96, 0x00};`

Frequency Parameters: `byte frequency[] = {0x86, 0x36, 0x57, 0xE9, 0xBE};`

Image Calibration Parameters: `byte calib_image[] = {0x98, 0xD7, 0xDB};`

Power Amplifier Parameters: `byte pa_config[] = {0x95, 0x04, 0x07, 0x00, 0x01};`

DIO2 as RF Switch: `byte dio2[] = {0x9D, 0x01};`

### Step 3: Define Transmitter Settings

To setup the transmitter the following settings/commands need to be defined for every transmission:

Transmitter parameters: `byte tx_params[] = {0x8E, 0x16, 0x06};`

Power Amplifier Parameters: `byte pa_config[] = {0x95, 0x04, 0x07, 0x00, 0x01};`

OCP Parameters: `byte ocp[] = {0x08, 0xE7, 0x38};`

Regulator Parameters: `byte regulator[] = {0x96, 0x00};`

Clear Device Errors command: `byte clear_deviceErrors[] = {0x07, 0x00};`

Clear IRQ command: `byte clear_IRQ[] = {0x02, 0xFF, 0xFF};`

Buffer Parameters: `byte buffer_base[] = {0x8F, 0x80, 0x00};`

Sync byte parameters: `byte set_sync[] = {0x0D, 0x06, 0xC0, 0x2D, 0xD4};`

IRQ Parameters: `byte irq_param[] = {0x08, 0x00, 0x02, 0x00, 0x02, 0x00, 0x00, 0x00, 0x00};`

### Step 4: Define Receiver Settings

To setup the receiver the following settings/commands need to be defined every time it is moved from standby to receive mode:

Clear Device Errors command: `byte clear_deviceErrors[] = {0x07, 0x00};`

Clear IRQ command: `byte clear_IRQ[] = {0x02, 0xFF, 0xFF};`

Buffer Parameters: `byte buffer_base[] = {0x8F, 0x80, 0x00};`

Sync byte parameters: `byte set_sync[] = {0x0D, 0x06, 0xC0, 0x2D, 0xD4};`

Receiver Gain: `byte rx_gain[] = {0x0D, 0x08, 0xAC, 0x96};`

IRQ Parameters: `byte irq_param[] = {0x08, 0x00, 0x02, 0x00, 0x02, 0x00, 0x00, 0x00, 0x00};`

Set to Receiver Mode: `byte rx_mode[] = {0x82, 0x00, 0x00, 0x00};`

### Step 5: Send configuration settings to Lambda68

These settings can then be sent to the LAMBDA68 module. To do this we first check to make sure the Lambda68 module is not busy. This is achieved by getting the state of the busy pin using the command "digitalRead(busy_pin)". If the device is busy it will have a value of 1, if it is not busy then it will be 0.

To ensure that a command is not sent whilst the LAMBDA68 module is busy a while loop was used.

```
while (digitalRead(busy_pin) == 1) {
}
```

When the LAMBDA68 is no longer busy the Opcode and settings can be sent. This can be achieved by setting the chip select pin low and using a for loop as shown below:

```
digitalWrite(Chip_Select, LOW);
for (int i = 0; i < Size; i++) {
  SPI.transfer(Array[i]);
}
digitalWrite(Chip_Select, HIGH);
```


The for loop will send each byte of the array one after the other, for the length of the array. Once the entire array has been sent the chip select pin is set to high. This indicates to the LAMBDA68 module that there is no more information for that array. This needs to be repeated for each array in the order they have been shown previously.

### Step 6: Transmit/Receive

Now that both the transmitter and receiver are setup and in the correct operating mode a packet can be sent/ received.

Transmitter:

To send a packet you first need to write the data to the buffer. This can be achieved by using the following array:




The amount of bytes that you write to the buffer can be adjusted by changing the packet parameters for both receiver and transmitter, and adjusting the write to buffer packet to match. For this example it is sending 13 bytes containing 1-13 in decimal.

Once your data has been written to the buffer to lambda module needs to be set to Transmit mode. This is achieved by sending the array:

```
byte txmode[] = {0x83, 0x00, 0x00, 0x00};
```

This will send all the data stored within the buffer. Once complete the lambda module needs to be set into standby mode by sending the standby array.

```
byte standby[] = {0x80, 0x01};
```

Receiver:

When receiving the sent packet first we need for a valid packet to be detected. This can be achieved by monitoring DIO3. When this pin goes high it indicates a valid packet has been received.

Once a valid packet has been detected the buffer can be read. To do this the following section of code was used:

```
digitalWrite(Chip_Select, LOW);
SPI.transfer(read_buff);
for (int i = 0; i < 15; i++) {
  bytel = SPI.transfer(0x00);
}
digitalWrite(Chip_Select, HIGH);
```

The first step is to send the chip_ select pin low to indicate to the lambda module you are about to send a command. Next the command “read_buff” is sent. This is the Opcode for reading the buffer, which is “0x1E”.

To read the data in the buffer you then need to send a “blank” byte and store the returned value in a variable. For this example we need to read 15 bytes from the buffer as this will also read the preamble which is 2 bytes long.

Once you have finished reading the buffer the chip select pin needs to be set low, to indicate you have finished.

The LAMBDA68 now needs to be put back to standby mode using the same array as before.

# LAMBDA68 Arduino Shield

## Simplified Declaration of Conformity (RED)

***BG -*** С настоящото RF Solutions Limited декларира, че този тип радиосъоръжение дефинирани в този документ е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: www.rfsolutions.co.uk

***CS -***Tímto RF Solutions Limited prohlašuje, že typ rádiového zařízení definované v tomto dokumentu je v souladu se směrnicí 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: www.rfsolutions.co.uk

***DA -*** Hermed erklærer RF Solutions Limited , at radioudstyrstypen defineret i dette dokument er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: www.rfsolutions.co.uk

***DE -*** Hiermit erklärt RF Solutions Limited , dass der Funkanlagentyp in diesem Dokument definiert der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: www.rfsolutions.co.uk

***EL -*** Με την παρούσα ο/η RF Solutions Limited , δηλώνει ότι ο ραδιοεξοπλισμός ορίζεται σε αυτό το έγγραφο πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: www.rfsolutions.co.uk

***EN -*** Hereby, RF Solutions Limited declares that the radio equipment type defined within this document is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.rfsolutions.co.uk

***ES -*** Por la presente, RF Solutions Limited declara que el tipo de equipo radioeléctrico definido dentro de este documento es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: www.rfsolutions.co.uk

***ET -***Käesolevaga deklareerib RF Solutions Limited , et käesolev raadioseadme tüüp määratletud selles dokumendis vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil: www.rfsolutions.co.uk

***FI -***RF Solutions Limited vakuuttaa, että radiolaitetyyppi määratletud selles dokumendis on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: www.rfsolutions.co.uk

***FR -*** Le soussigné, RF Solutions Limited , déclare que l'équipement radioélectrique du type défini dans ce document est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: www.rfsolutions.co.uk

***HR -*** RF Solutions Limited ovime izjavljuje da je radijska oprema tipa definirani u ovom dokumentu u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: www.rfsolutions.co.uk

***HU -*** RF Solutions Limited igazolja, hogy a dokumentumban meghatározottak szerint típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: www.rfsolutions.co.uk

***IT -*** Il fabbricante, RF Solutions Limited , dichiara che il tipo di apparecchiatura radio definito all'interno di questo documento è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: www.rfsolutions.co.uk

***LT -*** Aš, RF Solutions Limited , patvirtinu, kad radijo įrenginių tipas apibrėžta šiame dokumente atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: www.rfsolutions.co.uk

***LV -*** Ar šo RF Solutions Limited deklarē, ka radioiekārta kas definēts šajā dokumentā atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: www.rfsolutions.co.uk

***MT -*** B'dan, RF Solutions Limited , niddikjara li dan it-tip ta' tagħmir tar-radju definit f'dan id-dokument huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: www.rfsolutions.co.uk

***NL -*** Hierbij verklaar ik, RF Solutions Limited , dat het type radioapparatuur gedefinieerd in dit document conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: www.rfsolutions.co.uk

***PL -*** RF Solutions Limited niniejszym oświadcza, że typ urządzenia radiowego zdefiniowane w tym dokumencie jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: www.rfsolutions.co.uk

***PT -*** O(a) abaixo assinado(a) RF Solutions Limited declara que o presente tipo de equipamento de rádio definido neste documento está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: www.rfsolutions.co.uk

***RO -*** Prin prezenta, RF Solutions Limited declară că tipul de echipamente radio definit în acest document este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: www.rfsolutions.co.uk

***SK -*** RF Solutions Limited týmto vyhlasuje, že rádiové zariadenie typu definované v tomto dokumente je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: www.rfsolutions.co.uk

***SL -*** RF Solutions Limited potrjuje, da je tip radijske opreme opredeljeno v tem dokumentu skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu: www.rfsolutions.co.uk

***SV -*** Härmed försäkrar RF Solutions Limited att denna typ av radioutrustning definieras i detta dokument överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: www.rfsolutions.co.uk

**RF Solutions Ltd. Recycling Notice**
Meets the following EC Directives:
**DO NOT**
Discard with normal waste, please recycle.
**ROHS Directive 2011/65/EU as amended by 2015/863/EU**
Specifies certain limits for hazardous substances.
**WEEE Directive 2012/19/EU**
Waste electrical & electronic equipment. This product must be disposed of through a licensed WEEE collection point. RF Solutions Ltd., fulfils its WEEE obligations by membership of an approved compliance scheme. Environment Agency Registration Number: **WEE/JB0104WV.**

**Waste Batteries and Accumulators Directive 2006/66/EC**
Where batteries are fitted, before recycling the product, the batteries must be removed and disposed of at a licensed collection point. RF Solutions battery producer number BPRN00060.

**Disclaimer:**
Whilst the information in this document is believed to be correct at the time of issue, RF Solutions Ltd does not accept any liability whatsoever for its accuracy, adequacy or completeness. No express or implied warranty or representation is given relating to the information contained in this document. RF Solutions Ltd reserves the right to make changes and improvements to the product(s) described herein without notice. Buyers and other users should determine for themselves the suitability of any such information or products for their own particular requirements or specification(s). RF Solutions Ltd shall not be liable for any loss or damage caused as a result of user's own determination of how to deploy or use RF Solutions Ltd's products. Use of RF Solutions Ltd products or components in life support and/or safety applications is not authorised except with express written approval. No licences are created, implicitly or otherwise, under any of RF Solutions Ltd's intellectual property rights. Liability for loss or damage resulting or caused by reliance on the information contained herein or from the use of the product (including liability resulting from negligence or where RF Solutions Ltd was aware of the possibility of such loss or damage arising) is excluded. This will not operate to limit or restrict RF Solutions Ltd's liability for death or personal injury resulting from its negligence.