
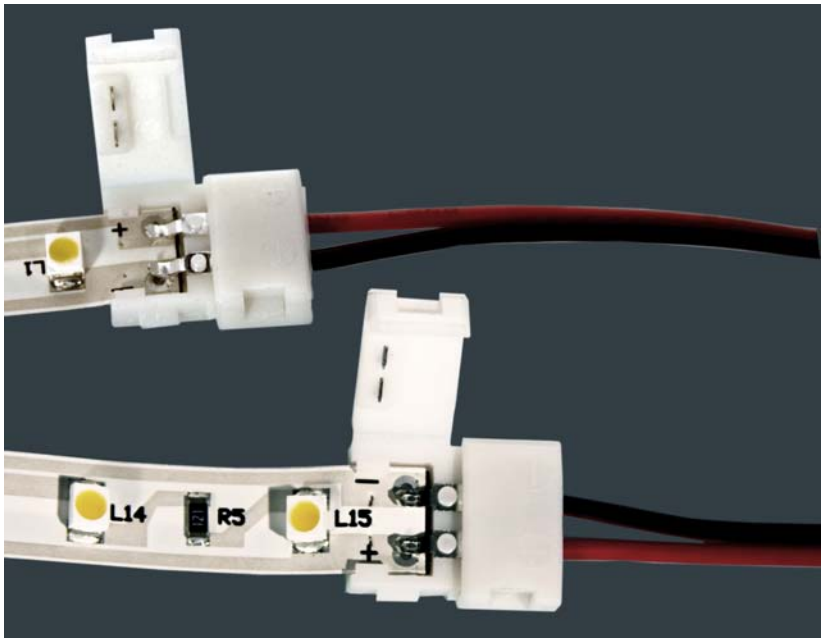


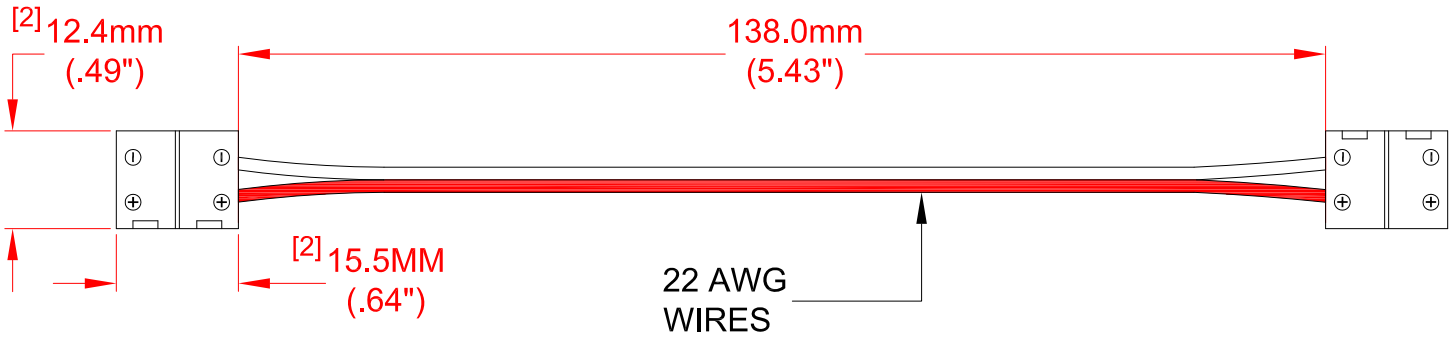

NOTES:

1. OPERATION

    1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
    2. SWING COVER OFF OF CONTACTS.
    3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
    4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.

2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.

JKL PART NO.: ZFS-CH138-8J

REV. NO.	DESCRIPTION/ECO NUMBER	APPV'D DATE
	RELEASE & CANCEL PL-1301-02	3/5/13

METRIC / THIRD ANGLE PROJECTION	DIMENSIONS ARE IN mm (INCHES) / TOLERANCE UNLESS OTHERWISE SPECIFIED: 1 PL +/- REF., 2 PL +/- REF., ANGLE +/-	JKL COMPONENTS CORPORATION				
		TITLE: NO SOLDER 8mm FLEX TAPE JOINER CONNECTOR				
DRAWN BY: L. WENGSTROM	APPV'D BY: L.R. DATE: 3/5/13	SIZE: A	FSCM NO.: 55335	DRAWING NO.: ZFS-CH138-8J		
- CAD DRAWING - MANUAL REVISIONS NOT PERMITTED		SCALE: NONE	RELEASED DATE: 3/5/13	REVISION DATE	REV. NO.	SHEET 1 OF 1