

HMEC - SERIES


BUL86263
REV. B

ASSEMBLY INSTRUCTIONS FOR
HMEC - HME REAR COVER

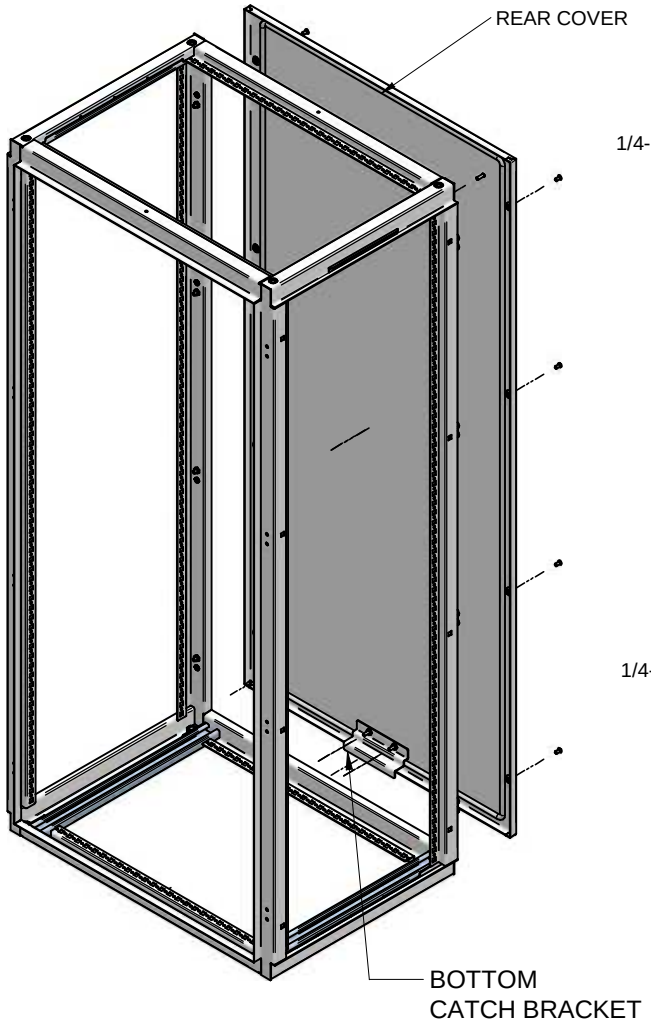

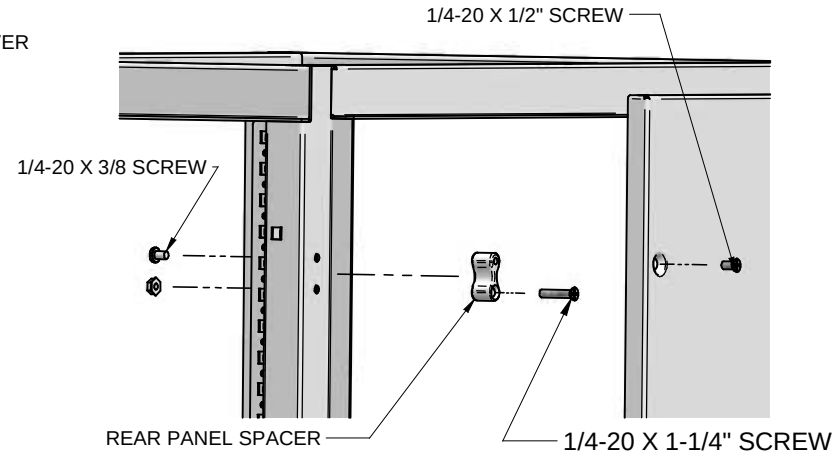

TOP HALF SPACER ASSEMBLY (REF)

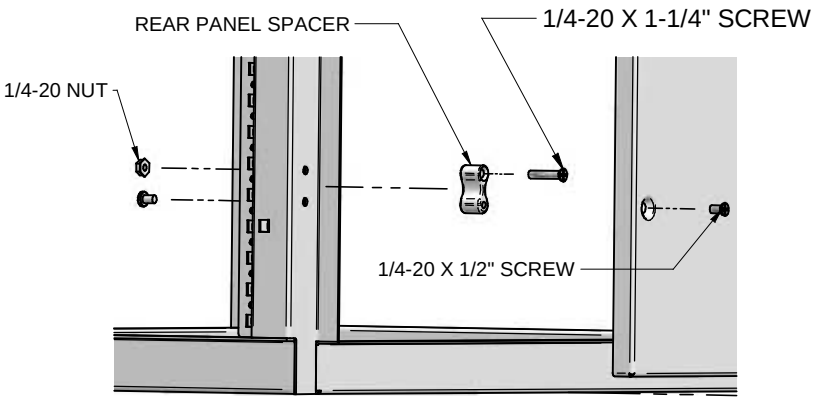

BOTTOM HALF SPACER ASSEMBLY (REF)

REMOVAL INSTRUCTIONS:

A) Using a phillips screwdriver, unscrew the 1/4-20 X 1/2" screw.

B) Remove rear panel.

INSTALLATION INSTRUCTIONS:

A) Rest bottom catch bracket on frame.

B) Align holes to rear panel spacer

D) Using a philips screw driver install and tighten 1/4-20 X 1/2" screws.

TOOL BOX	Phillips Screw Driver	7/16" Socket Wrench
		

HAMMOND MANUFACTURING™
www.hammondmfg.com