| MCS SERIES

SOFT START/SOFT STOP SOLID STATE RELAY



Features

- Microcontroller based soft start/soft stop SSR
- Ratings from 25 A to 90 A @ 48-530 VAC
- Low-voltage, current or potentiometer control
- Output status indicator
- Adjustable ramp rates
- For use with a wide range of resistive loads

PRODUCT SELECTION

Line Voltage	25 A	50 A	90 A
120 VAC	MCST1225	MCST1250	MCST1290
240 VAC	MCST2425	MCST2450	MCST2490
480 VAC	MCST4825	MCST4850	MCST4890

SPECIFICATIONS

Output (voltage)

Description	120 VAC	240 VAC	480 VAC
Operating Voltage (47-63Hz) [Vrms]	48-140	180-280	300-530
Transient Overvoltage [Vpk]	400	600	1200
Maximum Off-State Leakage Current @ Rated Voltage [mArms]	5	7	12
Minimum Off-State dv/dt @ Maximum Rated Voltage [V/µsec]	200	200	200

Copyright © 2024 Sensata Technologies, Inc.

Output (current)

Description	25A	50A	90A
Maximum Load Current [Arms]	25	50	90
Minimum Load Current [mArms]	150	150	150
Maximum Surge Current (16.6 msec) [Apk]	250	625	1200
Maximum On-State Voltage Drop @ Rated Current [Vpk]	1.6	1.6	1.6
Thermal Resistance Junction to Case (Rjc) [°C/W]	1.02	0.63	0.28
Maximum I^2t for Fusing (8.3 msec) [A^2sec]	260	1620	6000

Input [(1)]

Description	DC Control
DC Voltage Supply Range (VDC) [P1]	8-32
Input Current Range [mA] [P1]	28-30
Nominal Input Impedance [Ohm] [P3]	30K
Control Must Operate Voltage "On"[VDC][P3]	5-32
Control Must Release Voltage "Off" [VDC][P3]	0-4
Control Input Current [mA][P3]	0-2.6
PLV Range Option A [VDC][P4]	0.5-5
PLV Range Option B [VDC][P4]	1.25-7
PLV Range Option C [VDC][P4]	2-10
PLV Range Option D [VDC][P4]	4-20
Nominal Input Impedance Option A,B,C [Ohm][P4]	20K
Nominal Input Impedance Option D [Ohm][P4]	220

Output Status Functions

Conditions	
Initial Logic Supply	Flash Once
Load Voltage Missing/Load Open (w/control disabled)	Flash Once Intermittenly
Load Voltage Missing/Load Open (w/control enabled)	Off
Ramp Time (Soft Start upon P3 Enabled)	Off to Bright
Ramp Time (Soft Start upon P3 Disabled)	Bright to Off
Output ON (Normally Steady Operation)	On

General


Description	Parameters
Minimum Power Factor (with Maximum Load)	0.5
Dielectric Strength, Input/Output/Base (50/60 Hz)	4000 Vrms
Minimum Insulation Resistance (@ 500 VDC)	10^9 Ohms
Maximum Capacitance, Input/Output	10 pF
Ambient Operating Temperature Range	-20 to 80˚C
Ambient Storage Temperature Range	-40 to 125˚C

Copyright © 2024 Sensata Technologies, Inc.


Weight (typical)	3.0 oz (86.5g)
Encapsulation	Thermally Conductive Epoxy
Terminals-Power	Screws and Saddle Clamps Furnished, Unmounted
Terminals-Control	Barrier Strip Screw Terminals
Max. Terminal (Power) Screw Torque	20 lb-in (8-32 screws, dry without grease)

MECHANICAL SPECIFICATIONS


Tolerances: ±0.02 in / 0.5 mm
All dimensions are in inches [millimeters]

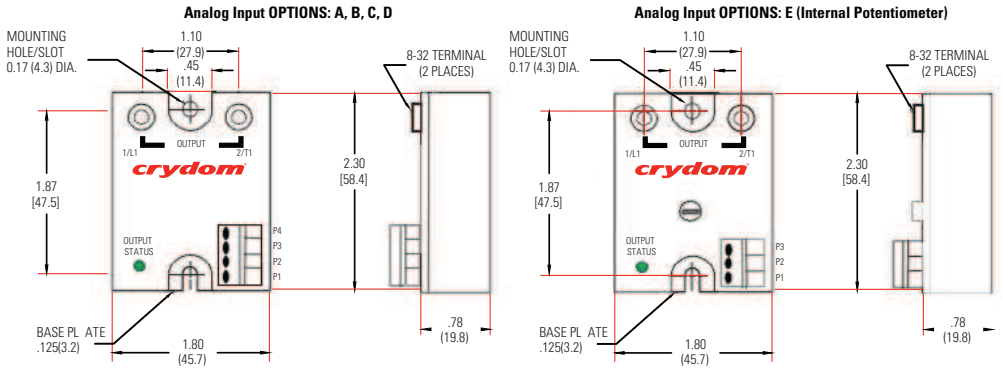

THERMAL DERATE INFORMATION

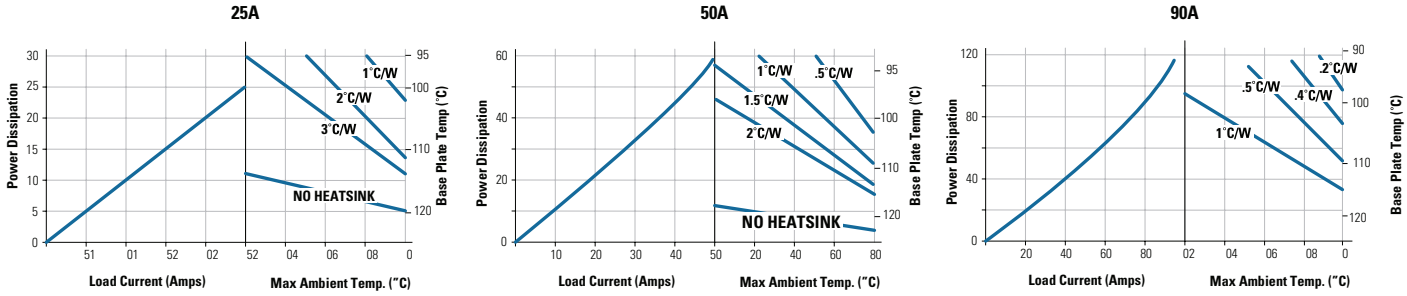


WIRING DIAGRAM

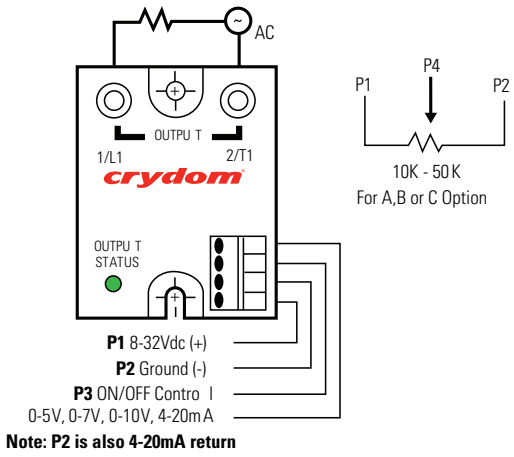



Note: P2 is also 4-20mA return


Copyright © 2024 Sensata Technologies, Inc.


RAMP TIME IN SECONDS

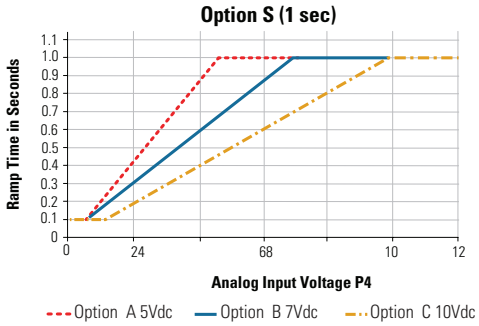

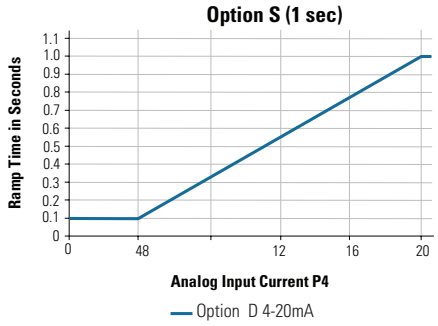

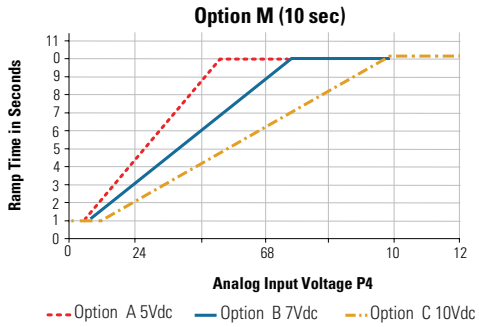

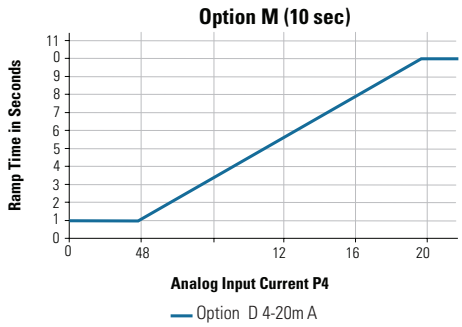

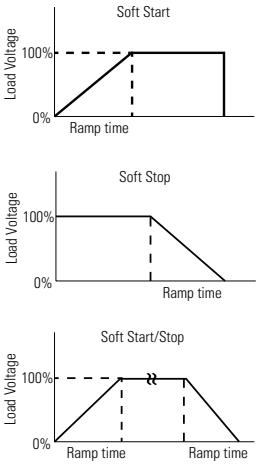

ORDERING OPTIONS

Example : MCST2425CS

MC	ST	24	25	C	S

Series

MC

Product Type

ST: Soft Start
SP: Soft Stop
SS: Soft Start/Soft Stop

Operating Voltage

12: 90-140 Vrms
24: 180-280 Vrms
48: 300-530 Vrms

Rated Load Current

25: 25 Amps
50: 50 Amps
90: 90 Amps

Analog Input

A: 0-5 VDC
B: 0-7 VDC
C: 0-10 VDC
D: 4-20 mA
E: Internal Potentiometer

Ramp Time On/Off

S: 100 msec - 1 sec
M: 1 sec - 10 sec

— Required for valid part number
☐ For options only and not required for valid part number

NOTE: Not all combinations are available.
Consult factory for information on the availability of a specific part number.

Copyright © 2024 Sensata Technologies, Inc.

GENERAL NOTES

[1] All parameters at 25°C unless otherwise specified.
[2] Voltages are reference to GND (Ground = 0 VDC) P2

AGENCY APPROVALS & CERTIFICATIONS

c UL us E116949 CE RoHS 50

WARNINGS



RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE
- The product's side panels may be hot, allow the product to cool before touching
- Follow proper mounting instructions including torque values
- Do not allow liquids or foreign objects to enter this product

Failure to follow these instructions can result in serious injury, or equipment damage.



HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH
- Disconnect all power before installing or working with this equipment
- Verify all connections and replace all covers before turning on power

Failure to follow these instructions will result in death or serious injury.

Datasheets provided by Sensata Technologies, Inc., its subsidiaries and/or affiliates ("Sensata") are solely intended to assist third parties ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, valuation, and judgment in designing Buyer's systems and products. Sensata datasheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular datasheet. Sensata may make corrections, enhancements, improvements, and other changes to its datasheets or components without notice.
Buyers are authorized to use Sensata datasheets with the Sensata component(s) identified in each particular datasheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATASHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATASHEETS OR USE OF THE DATASHEETS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATASHEETS OR USE THEREOF.
All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com. SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY, AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

Copyright © 2024 Sensata Technologies, Inc.

Rev:07/24/2024

CONTACT US

Americas
+1 (800) 350 2727
sales.crydom@sensata.com
Europe, Middle East & Africa
+44 (1202) 416170
ssr-info.eu@sensata.com
Asia Pacific
sales.isasia@list.sensata.com
China +86 (21) 2306 1500
Japan +81 (45) 277 7117
Korea +82 (31) 601 2004
India +91 (80) 67920890
Rest of Asia +886 (2) 27602006 ext 2808