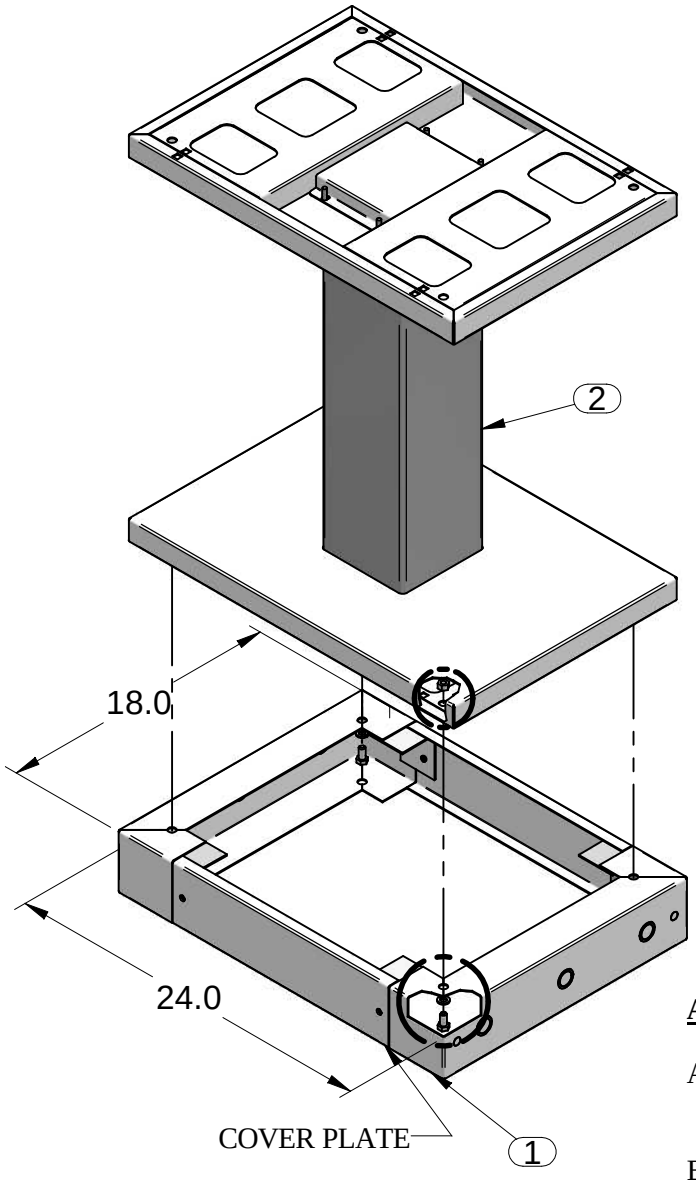
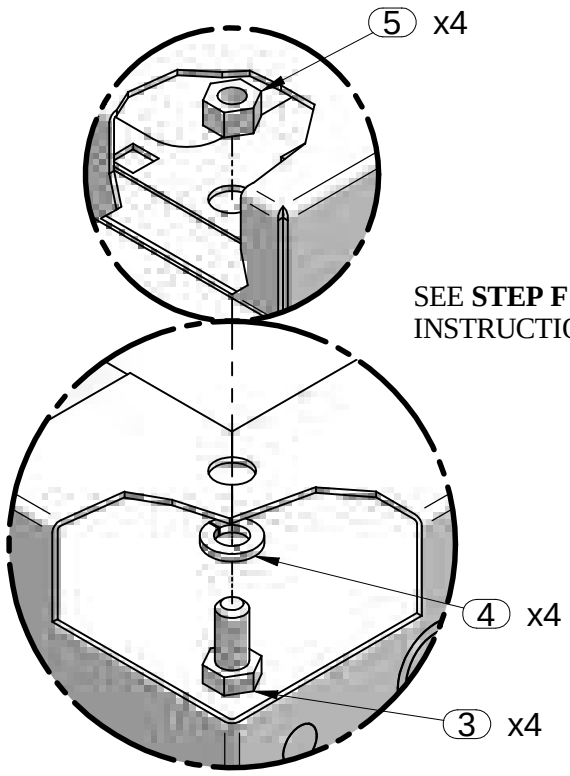
# 2000 MODULAR CONSOLE - SERIES

## ASSEMBLY INSTRUCTIONS FOR PEDESTAL TO PLINTH UNIT

**BUL10076**
**REV. A**


**Note:** When assembling total modular system build from the floor up for assembly ease. Plinth > Pedestal > Terminal

| PARTS LIST | | |
|---|---|---|
| **ITEM No.** | **DESCRIPTION** | **QTY** |
| **1** | PLINTH | 1 |
| **2** | BASE UNIT | 1 |
| **3** | 3/8-16 X 3/4 HEX CAP SCREW | 4 |
| **4** | 3/8-16 LOCK WASHER | 4 |
| **5** | 3/8-16 HEX NUT | 4 |

**ASSEMBLY INSTRUCTIONS:**

A) Layout plinth (item 1) on floor, square plinth, mark and drill 5/16" (8.0mm) dia. hole for 3/8 LAG bolts (4) - not supplied.

B) LAG assembled plinth to floor. Assure that plinth is square and accurate.

C) Align pedestal (item 2) over top opening in plinth unit. Side edges of pedistal and plinth are to be flush.

D) Front and rear holes in pedestal bottom are to be aligned with mounting holes on plinth top.

E) Once the pedestal is seated properly on the plinth remove cover plates on plinth.

F) Assemble using 3/8-16 x .75 hex head bolt and 3/8 nuts and lock washers (item 3, 4, & 5) provided. Torque bolts and nuts to 180 in/lbs

TOOL BOX




9/16 Socket Wrench



9/16 Open Wrench



Eletric Drill 5/16" (8.0 mm) Dia. bit



#2 Phillips Screw Driver



Hammer



**HAMMOND MANUFACTURING™**
*ELECTRONICS GROUP*

visit our website @ ***www.hammondmfg.com***