









IC Socket - for 28-pin 0.3" Chips - Pack of 3

PRODUCT ID: 2205

There are multiple versions of this item. Please select one from the options below:

- for 08-pin 0.3" Chips
- for 16-pin 0.3" Chips
- for 20-pin 0.3" Chips
- for 28-pin 0.3" Chips
- for 28-pin 0.6" Chips
- for 40-pin 0.6" Chips

40 IN STOCK

1 ADD TO CART

1-9

10-99

100+

ADD TO WISHLIST

DESCRIPTION

TECHNICAL DETAILS

DESCRIPTION

An IC (Integrated Circuit) socket allows you to insert and remove chips easily from an assembled kit or project

This item contains 3 of the 28 pin 0.3" wide version. Best used with chips that have 28 pins (2x14) and have 0.3" pin spacing. We also have 0.6" version, so don't use this for 'wide' 28p in chips

These are often used for soldering into a Perma Proto or PCB so that you can replace and swap chips easily. What's nice about IC sockets is that they are the same pin spacing and size so you don't have to redesign the board! For our example photo, we put the socket into an Adafruit Perma-Proto Breadboard but any solderable PCB or protoboard will work great. Not recommended for solderless breadboards, the pins are not long enough.



TECHNICAL DETAILS

- 10mm x 36mm x 8mm / 0.4" x 1.4" x 0.3"
- Weight: 1.6g

RoHS

LEARN



BlueLive: Livestream Studio switcher controller
Mapped for Livestream Studio, switch streams with big ole buttons

MAY WE ALSO SUGGEST...


28-pin ZIF socket


MCP23017 - i2c 16


Arduino bootloader-


40-pin ZIF socket


Professional IC Extraction


IC Socket - for 28-pin 0.6"


Adafruit Perma-Proto Half-


IC Socket for 40-pin 0.6"


Adafruit Perma-Proto

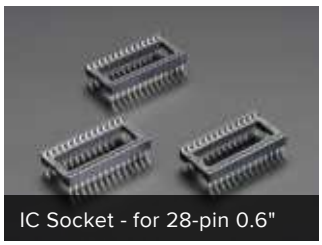

IC Socket - for 8-pin 0.3"

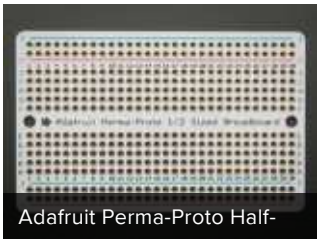

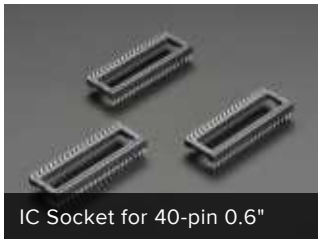2mm Pitch 25-Pin Female



IC Socket - for 16-pin 0.3"

DISTRIBUTORS EXPAND TO SEE DISTRIBUTORS

"Meaning can easily be confused with structure. Structure is a good approximation, but not the same" - Claudia Perlich

ENGINEERED IN NYC Adafruit ®

4.9 ★★★★★ Google Customer Reviews